



APPLICATION NOTE  
S1000  
RESET PANEL TO DEFAULTS

Please find below the procedure to reset the Factory Default Programming

- 1 Remove power at the connector J-1 the white 5-pin connector to the left of the display.
- 2 Jumper pins 1 and 3 (pin 1 is at the top) on connector J-2 on the mid right hand side of the board.
- 3 While jumper is in place on J-2 reconnect power at connector J-1.
- 4 "diag" will show solid (not flashing on and off) in the display.
- 5 Remove jumper from J-2
- 6 Press select twice.
- 7 "1n1t" will be displayed.
- 8 Press Enter – Display will flash "prog" then "Done" and then "DISP"
- 9 Remove power from connector J-1 for fifteen seconds.
- 10 Reconnect power to J-1 to complete the reset to factory defaults.
- 11 You may now program the panel, as you desired.

If you have any questions about these procedures or if there is still a problem contact our technical service department for assistance by dialing **800-776-7744**.

